



User Manual

Front Loading Washing Machine

Model: AWM-60115UB
AWM-70415 INV
AWM-80415 INV
AWM-60115 INV
AWM-70215 INV
AWM-80215 INV

WARNING

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in launderettes.
- Manual loss, Call our service number.
- Water pressure: 0.03-1 Mpa.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Safety Notifications (Please Must Follow)

- In order to prevent the harm or damage to the user or the person and property of others, please make sure to follow the safety issues.



- The risk of electric shock.

1. Please use 220V-240V, above 10A with ground wire dedicated socket.
2. When inserting and pulling out the power cord please use the plug, please. Don't use the damaged power cord. When the power cord pin is dirty please wipe clean with dry cloth in time.
3. Do not use the wet hand to insert or pull out the plug.
4. Please pull out the plug when finishing, repairing or cleaning.

- The danger of fire and current leakage

1. Do not allow the washing machine close to the fire, or lighted cigarettes, candles and volatile materials.
2. Please do not sprinkle the water on the control panel of washing machine.
3. Please do not put the washing machine in the place of wet and outside place.
4. Please fix the drain pump and make sure the sewer unobstructed.

- The danger of high temperature

1. When washing in high temperature, the door glass will be heating. Please do not touch the door glass, especially Children.
2. When opening the door after high temperature washing, please wait for the temperature cooled down to a safe level and the door will unlocked automatically.

- The danger of getting hurt

1. Please handle the carton box after removing, don't let the children touch or eat.
2. Do not allow the children to operate or climb up to the washing machine.
3. Please close the door after use to avoid the children enter into the drum.

- The danger of injury

1. Do not put any heavy things on the top of the washing machine.
2. If you want to move the machine, please remember ask for help.
3. Please do not ask unprofessional people to repair the machine.

- The danger of damage the cloths

1. Please do not wash the cloths which is waterproof, like Raincoat, feather products, sleeping bags
2. Please wash the cloths which can be washed, if you have any doubt, please following the instructions.

- The danger of explosion

 
 
1. Please do not washing the cloths which stained with kerosene, gasoline, thinner, inflammable goods.
2. Please do not washing when gas leakage.

- When pull out the plug, the lock can be


- unlock even if there is lot of water inside. So please check the water level inside before unlock the door in order to avoid the unnecessary loss.

Part name

Attachment specification

instruction	water supply hose	wrench	transportation bolt caps
			

Part name

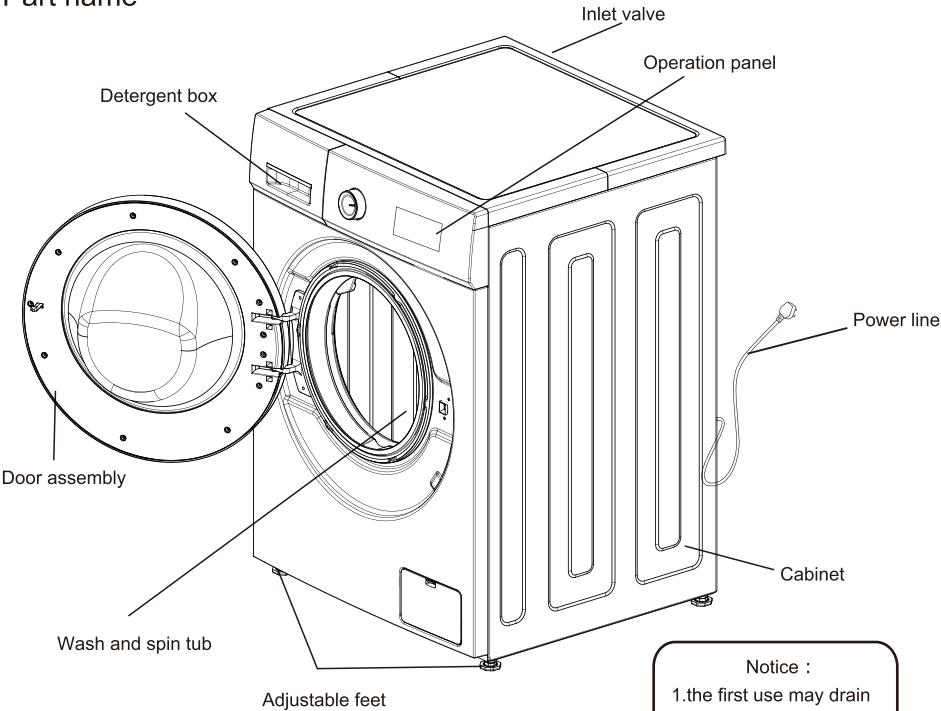

The above picture is just for reference,the detailed information should be based on the real product !

Notice :

- 1.the first use may drain some water out. It's residual water after performance test, belong to the normal phenomenon.
- 2.After each use, please pull the plug and turn off the faucet to prevent accidental flood or fire.

Installation instruction


- Make sure the temperature of the places where the washer is installed or placed above 0°C or put it outside.
- Place the washer correctly according to management standards and regulations.
- Keep the base of washer ventilated when it is placed on the ground with carpet.
- There are too much pests in villages. Please keep the surroundings clean because any damages caused by cockroaches or other pests don't belong to warranty.
- The household washing machine isn't intended to be built-in.

Transport bolt

Washers are installed with transport bolt to prevent internal damage in transit.

Dismantle the transport bolt

1. In order to prevent internal damage in transit, 4 bolts are installed. Before using the washer, dismantle the bolt. (see chart 1)
- If the bolts are not dismantled, violent vibration, noise and trouble will be caused.
2. Use the attached wrench to loosen the 4 bolts. (see chart 2)
3. Twist the bolt rubber slightly and then pull out the bolts, keep the bolts and wrench as standby. (see chart 3)
- The bolts should be remounted no matter when to transport the washer.
4. Use attached stopples to seal the screw holes. (see chart 4)

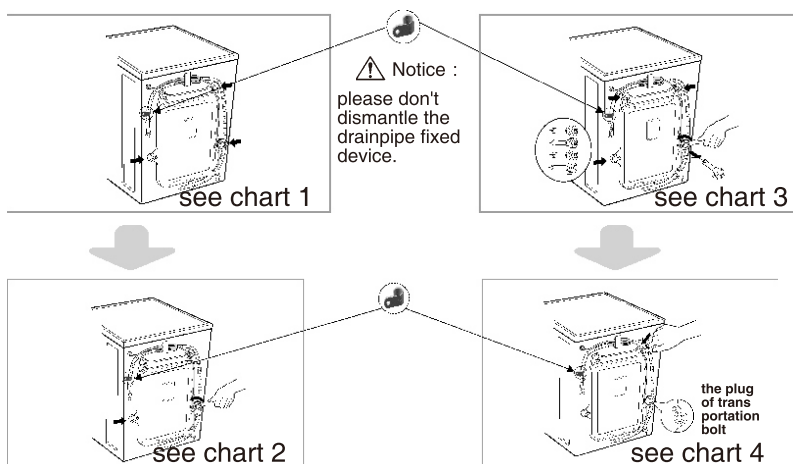

Requires for positions

Horizontal adjustment:


- The slant angle should be less than 1 degree.

Power outlet

- The distance between any side of washer and power outlet should be within 1.5 meters.
- Don't use too many electrical appliances in one outlet.

Environment cleaning

- It's necessary to clean the wall, door and ground.
- Install the washer on a hard and steady ground with floor drain rather than soft blanket or wooden floor.
- Don't put dirty clothes or some other goods on a washer's head cover, otherwise it may impact the normal operation.

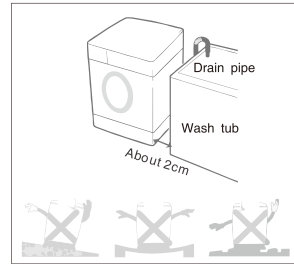

⚠ Notice

Power connection

1. Don't use the wiring board or something like that.
 2. If the power lines are damaged, please contact professionals to repair.
 3. After the use of washer, pull the plug and turn the tap off.
 4. Connect the washer with grounded outlet to correspond to the wiring principles.
 5. Place the washer in which is easy to connect the outlet.
- Contact the maintenance center and ask professionals to repair the washer. Laypeople may cause damages and troubles on the washer.
 - Don't put the washer in the place where the temperature is below zero. The pipes will be frozen and break. Moreover, the temperature below zero will damage the programming controller.
 - If move the washer in an environment whose temperature is below zero, please keep the washer at room temperature for a few hours before starting it.

Grounding introduction

- A washer must have the grounding devices. If a trouble happens, the device can reduce the risk of electrical shock. The device is equipped with a cable (including a wire and a grounded plug). The grounded plug must be inserted in an appropriate outlet. If you want to know if the washer is grounded correctly, please contact with professional maintenance staff. If the plug can't match with the outlet, please don't change the plug by yourself.
- Once your washer smokes or emits an odor, please cut the power and contact with professional maintenance staff.

Washers should be connected with water inlet. Please use attached new plumbing rather than the old.

In order to ensure the quality, water injection tests are carried out before the washer leaves factory, so there may be water inside the internal tub, door seals and door panel, which are normal.

Water inlet connection

1. The pressure of supply water should be between 30kPa and 1000kPa.

2. Don't abrade the screw thread when connect the inlet pipes with valves.

3. Please install dropping equipment if the pressure of supply water surpasses 1000kPa.

● Two seals are supplied in the connectors of both ends of the pipe to prevent water leaking.

● Turn on the tap and check if the connectors leak.

● Check the pipes regularly. Please change them if necessary.

● Make sure the pipes don't be damaged or twine with each other.

Use the standard faucet

 
 
standard faucet




longer faucet




square faucet



- 1** Check the rubber seals on both sides of the hose.
Insert a rubber seal into the threaded fittings on each hose to prevent leaking.

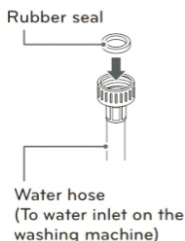

 - 2** Connect the water supply hoses to the water faucets tightly by hand and then tighten another 2/3 turn with pliers.
-Connect the blue hose to water faucet.




⚠ WARNING

- Do not overtighten. Damage to the coupling can result.

- 3** After connecting inlet hose to water faucets, turn on the water faucets to flush out foreign substances (dirt, sand or sawdust) in the water lines. Let water drain into a bucket, and check the water temperature.



 - 4** Connect the hoses to the water inlet tightly by hand and then tighten another 2/3 turn with pliers.



⚠ WARNING




- Do not overtighten the hoses. Overtightening can damage the valves resulting in leaking and property damage.

- 5** Check for leaks by turning on the faucets. If water leaks, check steps 1 to 4 again.

- Such washing machine is designed for home appliances, please do not install it on ship, traveling truck or plane.
- Please turn off the stopcock if long time out of use.
(e.g vacation)
- Please remove plug and cancel door lock function to avoid child locking himself/herself inside.
- Packing materials(e.g film, foam) could harm child's safety and cause asphyxia! Attention: MAKE ALL PACKING MATERIEALS OUT OF CHILD REACH.

Install drain-pipe

- Please fix the drain-pipe by a lifting rope.
- For the sake of lightening damage or ground leakage, please place the drain-pipe correctly.
- In order to avoid siphon, the height of drain-pipe should be between (0.85m-1.25m), moreover, the terminal of drain-pipe should not be placed in water.
- If the drain-pipe is too long, please do not force to insert it into washing machine, which would cause abnormal noises.
(Please check sketch map next page)

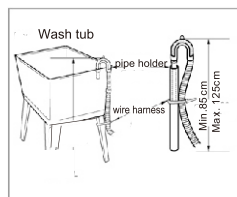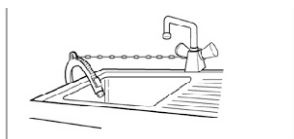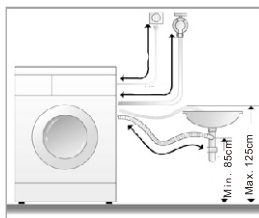


the instruction of installation of pipe

Horizontal Adjustment

- To avoid noise and vibrate by adjusting washing machine level. place it at the room corner preferably.
- If ground not level, please adjust alignment pins.(Do not put wood pieces or something like), please make sure four alignment pins touch ground tightly, and machine level completely.



- Adjust alignment pins
After adjusting alignment pins.
- The diagonal check
Applying force downward on the diagonal of the washing machine, washing machine should not shake. (both diagonal need to check, if the washing machine shake, must readjust adjustable foot.)

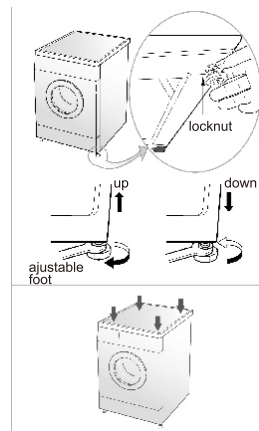

Methods of Door Lock and Remove

DOOR LOCK

- After operating, the door will be locked automatically and "DOOR LOCK" light/picture on the panel is lighting.

Remove Door Lock

- When "DOOR LOCK" light/picture is lighting, press "Start/Pause" , WASHING/DEWATERING drum stop operating. Please wait for about 2 minutes, door lock will be removed automatically.
- Foam overflowing if open the door during operating, please catch foam with towel.
- If temperature is too high, the door can not be opened during operating.
- If water level is too high, the door can not be open during operating.

The Usage Method of the Detergent Box

Synthetic Detergent Powder



- Please dissolve detergent (e.g soap pieces) before putting into detergent box.

Liquid detergent. Bleach



- Please use detergent with less foam.
- Please use two times water to dilute the concentrated type detergent before putting into detergent box.

Softener




- Please put softener before washing, which will pour into drum automatically when last potch happening.
- When using concentrated type softener, please dilute it with appropriate water.
- Do not exceed MAX mark.

Prewashing Detergent



- Please put moderate detergent after selecting Pre-washing function if cloths is too dirty.

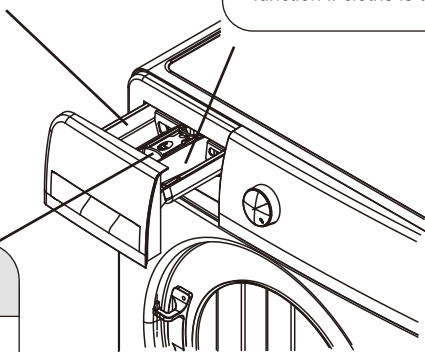


The above picture is just for reference, the detailed information should be based on the real product!

- Use special detergent.
- Do not use too much detergent which will cause too much foam and affect washing quality or will cause malfunction.
- Select detergent according to cloths variety, color, water temperature and contamination level.
- Please use moderate detergent to get washing effect and protect environment.

The Recommendations on detergent use at the various temperatures

- When washing heavily soiled whites, we recommend using cotton programs of 60°C or above and a normal washing powder (heavy duty) that contains bleaching agents that at medium/high temperatures provide excellent results.
- For washes between 40°C and 60°C, the type of detergent used needs to be appropriate for the type of fabric and level of soiling. Normal powders are suitable for "white" or colour fast fabrics with high soiling, while liquid detergents or "colour protecting" powders are suitable for coloured fabrics with light levels of soiling.
- For washing at temperature below 40°C we recommend the use of liquid detergents or detergents specifically labeled as suitable for low temperature washing.

Function Introduction of Operating Panel

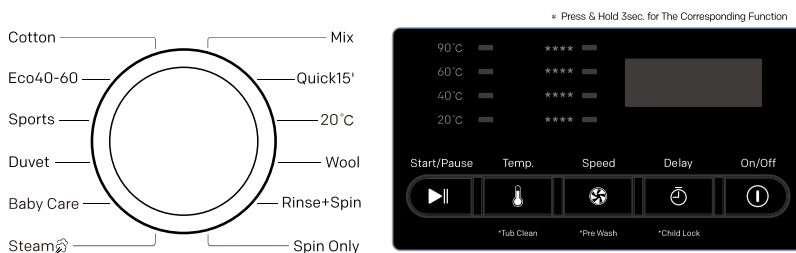

1. On/Off Button

- Turn on or turn off power.
- When procedure finish, press On/Off to cut off power.

2. Delay Button

- Delay Time
- Delay time refers to the period from appoint to end .

3. Speed Button

- Select the Speed according to the capacity and variety of cloths.
- Different procedure, different speed select range, but the speed of drum clearance no choice.

4. Temp. Button

- Select water temperature according to the variety and contamination degree.
- Different procedure, different water temperature range, some no choice.

5. Start/Pause Button

- Press it to start operating
- Press it to pause during operation, press again to continue.

6. Program Button

- Select program according to variety and contamination of cloths.

7. Tub Clean

- For the sake of clearing the scouring remained, and completing sterilization&disinfection
- Press Temp. for more than 3 seconds to start tub clean program.

8. Pre Wash Button

- If the cloths are too dirty, you can choose this program before washing.
- Press Speed for more than 3 seconds to start pre wash program.

9. Child-Lock Button

- Press it to guard against child operating.
- Child-Lock operating, other buttons unavailable except On/Off.
- Press Delay for more than 3 seconds to ON/OFF Child-Lock function.

The introduction of function and program

Usage of routine clothes

1.Preparations

- Open the door put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the On/Off button

3.Press Start/Pause button and begin to wash

4.When all operations finished, the buzzer emits a noise.

- Screen shows END, and buzzer rings.
- Open the door to get cloths out.
- Unplug and turn off the stopcock.

The usage of self-compiled program

Use this when need to set up the temperature, times of rinse and the revolution of spin.

1.Prepare to wash

- Open the door, put clothes in and close the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the On/Off button

3.The programs can be selected according to requirements.

4.Press Temp./Speed/Delay to setup water

temperature, dewatering speed and appoint time.

5. Press the Start/Pause button to start washing.

6.When all operations finished, the buzzer emits a noise.

- Screen shows END and buzzer rings.
- Get cloths out .
- Unplug and turn off the stopcock.

The introduction of Wool program

This function is set for woolen and fibrous clothes. Please confirm the washing icon in clothes before washing them.

1.Preparation for washing

- Open the door, put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the On/Off button, connect the power.

3.Rotate the program button and choose the “Wool”

- Please choose appropriate temperature and rotate speed according to requirements.

4.Press the Start/Pause button and begin to wash.

5. When all operations finished, the buzzer emits a noise.

- Washing capacity should be less than 2 kg.
- When finish all programs, please take out all clothes quickly to prevent them from distorting.
- The washing can't be ordered.
- In order to prevent clothes from damaging, the water temperature should be less than 40°C.
- Please separate white or bright color clothes from dark clothes.
- Use the detergent specially for woolen clothes to prevent damaging them.

The introduction of Eco40-60 program

Wash the clothes lightly polluted can save time and energy.

1.Preparation for washing

- Open the door, put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2. Press the On/Off button, connect the power.

3. Rotate the program button and choose the “Eco40-60”

- Please choose appropriate temperature and rotate speed according to requirements.

4. Press the Start/Pause button and begin to wash.

5. When all operations finished, the buzzer emits a noise.

- When the washer is working, if you want to change its setting, please press the Start/Pause button to stop running temporarily and then choose the program you need.

The introduction of Baby Care program

This function can use high temperature to sterilize and remove the mites.

1. preparation for washing

- Open the door, put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2. Press the On/Off button, connect the power.

3. Rotate the program button and choose the “Baby Care”

- Please choose appropriate temperature and speed according to requirements.

4. Press the Start/Pause button and begin to wash.

5. When all operations finished, the buzzer emits a noise.

The introduction of Spin program

1. preparation for washing

- Open the door, put clothes in and closes the door.

2. Press the On/Off button, connect the power.

3. Rotate the program button and choose the “Spin”

4. Press the Start/Pause button

- Begin to drain away water and spin.

5. When all operations finished, the buzzer emits a noise.

- Before spinning, please make sure there are no nails, keys or other foreign matters in the tub to avoid unnecessary loss.
- During the process of spinning, the actual spinning speed may be inconsistent with the program speed, which is because the washer adjust the speed according to the balance between clothes.
- There may be rhythmic drone during spinning, which is the normal voice of drain bump rather than the machine fault.

The introduction of Tub Clean function

1.Preparation for washing

- Please make sure nothing in the tub before cleaning.
- Open the distribution box, add the liquid bleach in the main box.
- Don't add detergent or laundry detergent to prevent causing too much foam.
- Close the distribution box.
- Please make sure the inlet pipes connected well and the tap turned on.

2.Press the On/Off button, connect the power.

3.Press the “Temp.” button for more than three seconds at the same time, which can choose the tub cleaning program.

4.Press the Start/Pause button.

- The programs begin to operate after the door locked.
- ### 5.When all operations finished, the buzzer emits a noise.

- After finish the program, dry the inside part of the machine to prevent the door from distorting.
- If there are children at home, please don't open the door for too much time.

The introduction of Child Lock function

- Prevent children from using the washer.
- Set the solving method: when the washer is operating, press the “Delay” for more than three seconds and the child-lock works; then pressing “Delay ” for more than three seconds or pulling the plug can relieve child-lock.
- When the washer is operating, after setting the child-lock, all buttons cannot work except the power button; once the child-lock is set, when the washer finishes all programs, press the power button to cut the power and the child-lock can't relieve by itself, when the washer operates again, press “ Delay” for more than three seconds to relieve the child-lock.
- When the child-lock is working, if you want to change the washing program, please relieve child-lock first and restart the machine to choose new washing program; if you want to change the temperature or the speed, please relieve child-lock first, then press the Start/Pause button, and change the temperature and speed at last.

The introduction of washing programs

AWM-60115UB

program	temperature (°C)	revolution (rpm)	time (m)
Cotton	cold water (20°C, 40°C, 60°C, 90°C)	800(0,400,600,1000)	88
Wool	cold water(20°C,40°C)	600(0,400)	56
Sports	20°C(cold water ,40°C)	800(0,400,600)	79
Mix	cold water(20°C,40°C)	800(0,400,600)	66
Eco40-60	40°C(cold water, 20°C,60°C)	1000(0,400,600,800)	135
Baby Care	60°C(40°C,90°C)	800(0,400,600)	109
Quick 15'	cold water(20°C,40°C)	600(0,400,800)	15
Rinse+spin	■■■■	800(0,400,600,1000)	20
Spin	■■■■	800(0,400,600,1000)	14
20 °C	20 °C	1000(0,400,600,800)	63
Duvet	60°C (cold water , 20°C, 40°C , 90°C)	1000(0,400,600,800)	118
Steam	20°C (cold water , 40°C, 60°C , 90°C)	800(0,400,600,1000)	83

AWM-70415 INV

program	temperature (°C)	revolution (rpm)	time (m)
Cotton	cold water (20°C, 40°C, 60°C, 90°C)	800 (0,400,1000,1400)	88
Wool	40 °C (cold water,20°C)	800 (0,400)	56
Sports	20°C(cold water ,40°C)	800 (0,400)	79
Mix	cold water(20°C,40°C)	800 (0,400)	66
Eco40-60	40°C(cold water,20°C,60°C)	1400 (0,400,800,1000)	208
Baby Care	60°C(40°C,90°C)	800 (0,400,1000)	109
Quick 15'	cold water(20°C,40°C)	800 (0,400)	15
Rinse+spin	■■■■	800 (0,400,1000,1400)	20
Spin	■■■■	800 (0,400,1000,1400)	14
20 °C	20 °C	1000 (0,400,800)	63
Duvet	60°C (cold water , 20°C, 40°C , 90°C)	1000 (0,400,800)	118
Steam	20°C (cold water , 40°C, 60°C , 90°C)	800 (0,400,1000)	83

The introduction of washing programs

AWM-80415 INV

program	temperature (°C)	revolution (rpm)	time (m)
Cotton	cold water (20°C, 40°C, 60°C, 90°C)	1000(0,400,800,1400)	94
Wool	cold water(20°C,40°C)	800(0,400,1000)	57
Sports	20°C (cold water ,40°C)	1000(0,400,800)	83
Mix	cold water(20°C,40°C)	1000(0,400,800)	73
Eco40-60	40°C (cold water, 20°C,60°C)	1400(0,400,800,1000)	158
Baby Care	60°C(40°C,90°C)	1000(0,400,800)	130
Quick 15'	cold water(20°C,40°C)	800(0,400,1000)	15
Rinse+spin	■■■■	1000(0,400,800,1400)	38
Spin	■■■■	1000(0,400,800,1400)	14
20 °C	20 °C	1000(0,400,800,1400)	63
Duvet	60°C (cold water , 20°C, 40°C , 90°C)	1400(0,400,800,1000)	125
Steam	20°C (cold water , 40°C, 60°C , 90°C)	800(0,400,1000,1400)	83

AWM-60115 INV

program	temperature (°C)	revolution (rpm)	time (m)
Cotton	cold water (20°C, 40°C, 60°C, 90°C)	800(0,400,600,1000)	88
Wool	cold water(20°C,40°C)	600(0,400)	56
Sports	20°C (cold water ,40°C)	800 (0,400,600)	79
Mix	cold water(20°C,40°C)	800 (0,400,600)	66
Eco40-60	40°C	1000	198
Baby Care	60°C(40°C,90°C)	800 (0,400,600)	109
Quick 15'	cold water(20°C,40°C)	600(0,400,800)	15
Rinse+spin	■■■■	800 (0,400,600,1000)	20
Spin	■■■■	800 (0,400,600,1000)	14
20 °C	20 °C	1000 (0,400,600,800)	63
Duvet	60°C (cold water , 20°C, 40°C , 90°C)	1000 (0,400,600,800)	118
Steam	20°C (cold water , 40°C, 60°C , 90°C)	800 (0,400,600,1000)	83

The introduction of washing programs

AWM-70215 INV

program	temperature (°C)	revolution (rpm)	time (m)
Cotton	cold water (20°C, 40°C, 60°C, 90°C)	1000 (0,400,800,1200)	88
Wool	cold water(20°C,40°C)	800 (0,400)	56
Sports	20°C (cold water ,40°C)	800 (0,400)	79
Mix	cold water(20°C,40°C)	800 (0,400)	66
Eco40-60	40°C(cold water, 20°C,60°C)	1200 (0,400,800,1000)	208
Baby Care	60°C(40°C,90°C)	800 (0,400,1000)	109
Quick 15'	cold water(20°C,40°C)	800 (0,400)	15
Rinse+spin	■■■■	1000 (0,400,800,1200)	20
Spin	■■■■	1000 (0,400,800,1200)	14
20 °C	20 °C	1000 (0,400,800,1200)	63
Duvet	60°C (cold water , 20°C, 40°C , 90°C)	800 (0,400)	118
Steam	20°C (cold water , 40°C, 60 °C , 90°C)	800 (0,400,1000)	83

AWM-80215 INV

program	temperature (°C)	revolution (rpm)	time (m)
Cotton	cold water (20°C, 40°C, 60°C, 90°C)	1000 (0,400,800,1200)	88
Wool	cold water(20°C,40°C)	800 (0,400)	56
Sports	20°C (cold water ,40°C)	800 (0,400)	79
Mix	cold water(20°C,40°C)	800 (0,400)	66
Eco40-60	40°C(cold water, 20°C,60°C)	1200 (0,400,800,1000)	218
Baby Care	60°C(40°C,90°C)	800 (0,400,1000)	109
Quick 15'	cold water(20°C,40°C)	800 (0,400)	15
Rinse+spin	■■■■	1000 (0,400,800,1200)	20
Spin	■■■■	1000 (0,400,800,1200)	14
20 °C	20 °C	1000 (0,400,800,1200)	63
Duvet	60°C (cold water , 20°C, 40°C , 90°C)	800 (0,400)	118
Steam	20°C (cold water , 40°C, 60 °C , 90°C)	800 (0,400,1000)	83

Maintenance

- Please maintenance washing machine to extend service life.
- Before maintenance, please unplug.

Body of washing machine

After washing, please clean it with soft cloth. If much contamination, please use appropriate detergent or soap.


- Do not watering directly.
- Do not use putty-powder, diluent, gasoline, alcohol to clean machine body.

Door Gasket Ring

After washing, please remove contamination, wastepaper and so on, if foreign matter exists, please remove.


The Clearance of Detergent Box

Please clean the detergent box regularly. Pull it out and wash with clean water, then insert back.

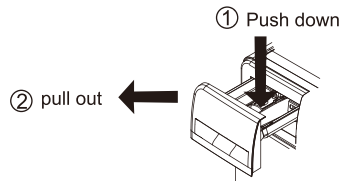


The Clearance of Universal coupling (Suggest:Once/ half year)

 - If waste accumulated, it will influence water inlet speed.
- 1.Take off the soft pipe from the universal coupling side.
 - 2.Take off the screwing device according to the arrow showed.
 - 3.Wash the inside of the screwing device.
 - 4.Install the cleaned crewing device with the inlet soft pipe.



The clearance of inlet water valve (Suggest:Once/ half year)


- 1.Take off the soft pipe from washing machine side.
- 2.Take off the filter net from water valve.
- 3.Clean the filter net with tooth-brash.
- 4.Install the soft inlet pipe.

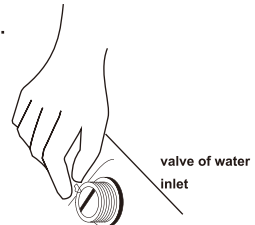

Maintenance

When washing machine is frozen

1. Cover stopcock and the universal coupling with hot towel.
2. Take off the inlet pipe, and put it into 50 degree water.
3. Pour into the drum about 2-3L of 50 degree water.
4. Connect inlet pipe, turn on the stopcock and start the washing machine, please check whether inlet and outlet is normal.

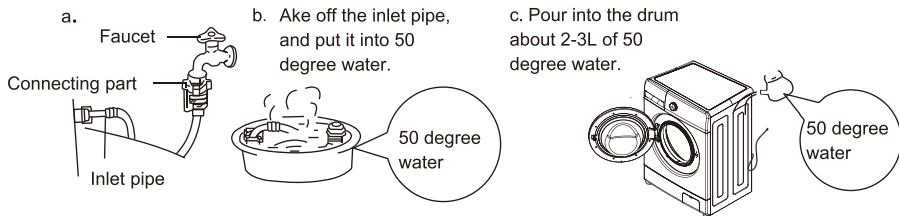

The Clearance of dewatering-pump filter(Suggest: once/monthly)

1. Press fastener on the pump after dewatering and power off, open the lid of water-pump filter.(Attention: if hot water inside, please go ahead after it be cold.)
2. Take off the filter anti-clockwise.
3. Wash the filter.
4. Direct at pump and insert the filter, tighten it clockwise and tighten the lid.

Attention: a. Please tighten the filter well to avoid leak.
b. Please do not clean during operation.

The Drum Clearance (Suggest once/monthly)

After using for a period, some dirt maybe exist. You can clean the inside and outside of drum by operating the drum procedure.

Attention: please do not put cloths and detergent when clearing the drum.

Varieties of Functions

Function	Description	
Child lock	Statement	In order to avoid child misplay
	Setup to remove	During operation, press Delay for more than 3 seconds, please unplug and or press Pre Delay to remove Child Lock
Intellectual lock-remove	Statement	When operation is over, if water insie is higher, the drain water pump is be on to drain to the open lock water level and stop.
Compensation of power-off	Statement	When power is connected after power off, the time point will continue from the previous stop time point.
Door self-lock	Statement	After selecting procedure, the door locked automatically, a few minutes after operation over, lock removed.
Clearance of the drum	Statement	To remove wasted and germ, please sterilize to clean the drum.
	Setup to remove	Press Temp. for more than 3 seconds to select tub clean.
Delay	Statement	Press DELAY to select time of washing , Display screen shows 24 hours level, one hour/one level . press it for long time, time shows circular.

Notice before Washing

1.Washing guide identification

- Please check cloths washing guide identification,which shows cloths texture and washing method.






2.Classification washing

- Please wash cloth of the same texture, different texture, different water temperature, speed and washing procedure, please split deep colored cloths from white cloths.Split dyed cloths from cotton,otherwise the white cloths would be discolored.If possible, please do not washing high contaminated cloths with clean ones together.
- The degree of pollution (serious,moderate,slight) classify clothes and wash according to the degree.
- color (white,light color,deep color) classify them and wash.
- velveteen (easy to fall off, easy to be adhered) classify the white and the deep color.

3. Notes

- When put big and small clothes together, put the big first and they have to be less than half of total clothes. Please don't wash single cloth because it may cause the trouble of imbalance. Please add one or two similar clothes.
- Small clothes like silk stockings and handkerchiefs should be put into mesh bags to wash. Before washing the bra with steel rings, please take the rings off. If it is inconvenient to do this, please put them into mesh bags to prevent the bra slipping into the gap between internal and external tubs.
- Check all pockets and make sure nothing in them. Nails, hairpin, match, pen, coin and key will damage your washer and clothes.
- Zip up all clothes, fix the button and hook and tie the loose belt, make sure that other clothes cannot be damaged by them.
- Firstly use the water with a little detergent to wash the parts with too many stains, such as collar and cuffs, which can make the clothes cleaner.

- Check the door seals and make sure nothing on them.
- Make sure there is nothing in the tub before washing.
- To make sure there is cloth caught in the door sealing ring, in order to avoid the cloths and door seal ring from damaging.

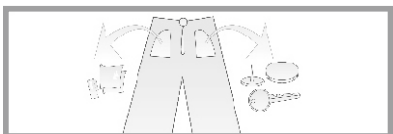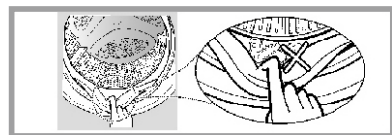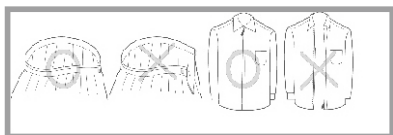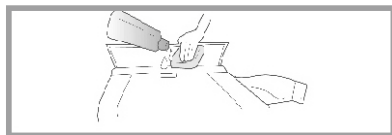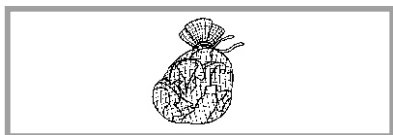

Non-fault conditions

The door can't open.	● The program is running. ● There are clothes between the door and door seals.
There is an odor.	● There may be a smell of rubber because some components are made up of rubber.
There is too little water when wash and rinse.	● Roller washing machine just needs a little water when operating.
No water inflowing.	● Is the tap turned on? ● Is the inlet pipe frozen? ● Are the filters blocked?
Water inflows halfway	● If the water level declines, the washer will supply water automatically.
Water outflows when washing.	● Check if add the detergent with too much bubbles.
Remaining time changes	● If clothes are off center when spin, spinning time will extend to correct the deviation.
There is abnormal noise when spin.	● Check if the power line touches with cabinet. ● Have the transport bolts been dismantled? ● Are there some hairpins or coins in the roller?
The washer can't work after the failure of electricity.	● The washer will stop working after the failure of electricity. When the power is restored, it still can't continue to work. Please press the power button and reset the program.

Troubleshooting guide

Phenomenon	check points	solutions
Washer can't start	● Check if press the power button or start/pause button? ● Is the plug pulling out? ● Is there a power failure? ● Check if cut the leakage protector?	Press the power button or start/pause button. Connect the plug. Please wait. Open the leakage protector.
Spinning screen shows "UE"	● Check if disassemble the carriage bolt? ● Is the machine placed steadily? ● Are the clothes too small or light? ● Are the locknuts on under the feet tightened up?	Disassemble the carriage bolt. Place the machine on a steady ground. Add more clothes. Tighten up the locknuts.
Water inflow screen shows "IE"	● Check if turn the tap off? ● Is the water supply cut off or the water pressure too low? ● Are the water inlet pipes frozen? ● Are the filters blocked?	Open the stopcock. Please wait. Use hot water to unfreeze the pipes. Take out the filters and clean them.
Water outflow screen shows "OE"	● Are the outlet pipes placed too highly? ● Are the outlet pipes frozen? ● Are the outlet pipes blocked? ● Are the floor drain blocked?	Please put away the outlet pipes and make sure the height within 1M. Use hot water to unfreeze the pipes. Take out the foreign matter and dredge the pipes. Clean the floor drain.
Door trouble screen shows "DE"	● Make sure if start the washer without closing the door well.	Make sure the door truly closed
No heating screen shows "LE"	Please pull the plug and entrust the after-sales service	
Continuous water inflow screen shows "FE"	Close the stopcock, pull the plug and ,entrust the after-sales service.	
The screen shows "LE" or "CE" when wash tub doesn't rotate.	Close the stopcock, pull the plug and ,entrust the after-sales service.	
Too much foam	● Check if add too much detergent? ● Check if add too much detergent?	Add reasonable amount of detergent. Use the detergent correctly.

Environmental Protection

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.



Specification

AWM-60115UB

Rated washing capacity	6.0kg
Rated spinning capacity	6.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	200W
Rated spinning power	500W
Rated heating power	1500W
Maximum power	1650W
External dimension	60*44*85cm

AWM-70415 INV

Rated washing capacity	7.0kg
Rated spinning capacity	7.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	200W
Rated spinning power	500W
Rated heating power	1600W
Maximum power	1700W
External dimension	60*44*85cm

AWM-80415 INV

Rated washing capacity	8.0kg
Rated spinning capacity	8.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	350W
Rated spinning power	700W
Rated heating power	1600W
Maximum power	1750W
External dimension	60*51*85cm

Specification

AWM-60115 INV

Rated washing capacity	6.0kg
Rated spinning capacity	6.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	200W
Rated spinning power	500W
Rated heating power	1600W
Maximum power	1700W
External dimension	60*41*85cm

AWM-70215 INV

Rated washing capacity	7.0kg
Rated spinning capacity	7.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	200W
Rated spinning power	500W
Rated heating power	1600W
Maximum power	1700W
External dimension	60*44*85cm

AWM-80215 INV

Rated washing capacity	8.0kg
Rated spinning capacity	8.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	200W
Rated spinning power	500W
Rated heating power	1600W
Maximum power	1700W
External dimension	60*48*85cm



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste

disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

There are separate collection systems for used electrical and electronic products. Please help us keep the environment clean.



This product is designed and corresponds to all European directives and requirements.