

CROWN[®]

ХОРИЗОНТАЛЕН ФРИЗЕР

РЪКОВОДСТВО ЗА УПОТРЕБА

CHF210 ICE



Index	English
Before use	1
Safety information	3
Before use	7
How to use	8
Food storage instructions	11
Cleaning and maintenance	12
Troubleshooting	13

Installation & location

 
1. Ventilation conditions

The location you select for the installation of the appliance should be well ventilated. Do not locate the appliance near a heat source such as cookers, boilers, and avoid direct sunlight, thus ensuring the cooling effect and saving on energy consumption. Do not place it in a damp place, thus preventing it from rusting. The result of dividing the total space of the room in which the The result of dividing the total space of the room in which the appliance is installed by the amount of refrigerant charge of the appliance should not be less than $8\text{gr}/\text{m}^3$.

Note: The amount of refrigerant required for the appliance is given on the nameplate, which is attached to the inside or outside of the product.

2. Recommended space needed for heat dissipation

When the appliance is operating, heat is emitted all around the appliance. Therefore, there must be at least 30 mm of free space at the top, more than 100 mm on both sides and more than 50 mm at the back of the appliance.

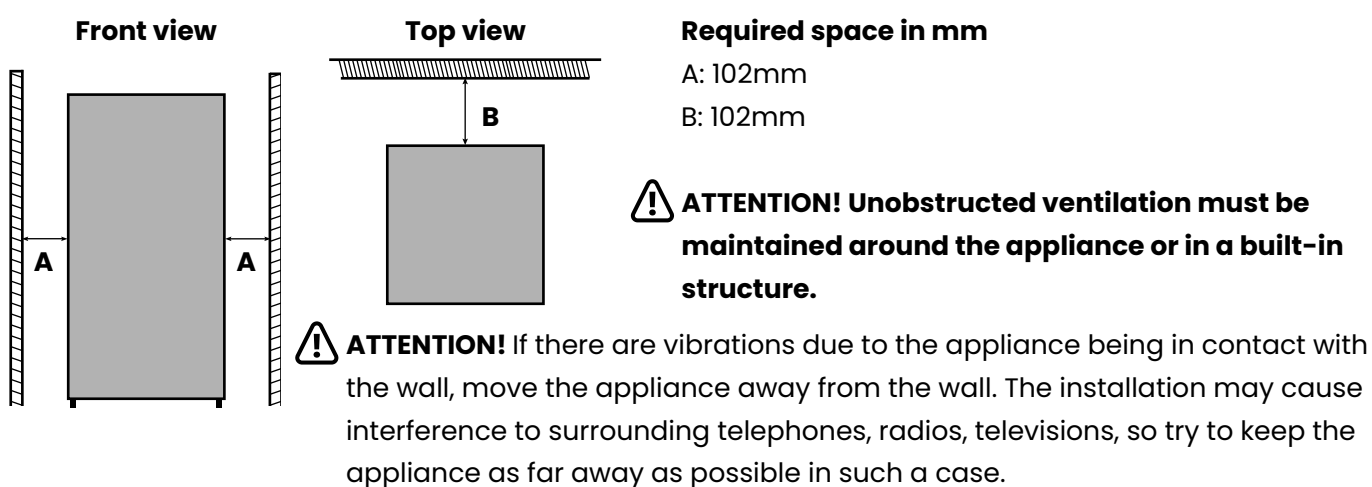

3. Ground level

Place the appliance on a firm, flat floor to keep it stable, otherwise it will cause vibration and noise. When the appliance is placed on materials such as carpets, mats, PVC... The legs of the appliance should be placed on solid plates.

Recommendations for use

1. Resting time

Once the appliance is properly installed and cleaned, do not switch it on immediately. It can be switched on after more than 1 hour of rest to ensure normal operation.

2. Testing and cleaning

Confirm that all fittings inside the unit are correctly installed and wipe the interior with a soft cloth.

3. Switching on

Connect the plug to the power socket to switch on the compressor. After 1 hour, open the freezer door (if available), if the temperature inside the freezer compartment drops considerably, it indicates that the refrigeration system is working normally.

4. Food storage

Once the appliance is turned on, the internal temperature will be automatically controlled according to the user's temperature setting. Once it has cooled down completely, place the food, which usually needs 2 to 3 hours to cool down completely. In summer, when the temperature is high, it takes more than 4 hours for the food to cool down completely (try to open the appliance door as little as possible, to avoid the inside temperature to rise considerably).

 
Moving the appliance

• Transport

Do not carry the appliance horizontally or upside down. Do not carry the appliance while holding the door or handle.

The appliance must be transported by lifting the bottom of the appliance.

IMPORTANT: The installation of this unit requires the intervention of several people.

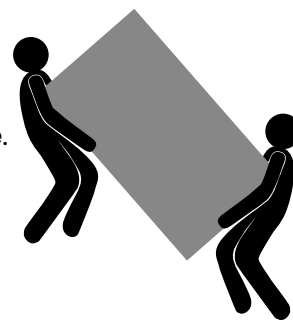

• Location

Do not place your appliance near a heat source, e.g. cooker, boiler or radiator.

 
Avoid direct sunlight.

• Leveling

Be sure to level your appliance using the front leveling feet.

If it is not level, the sealing performance of the appliance door gasket will be affected, or it may even cause your appliance to malfunction.

After placing the appliance in position, wait 4 hours before using it, to allow the refrigerant to settle.

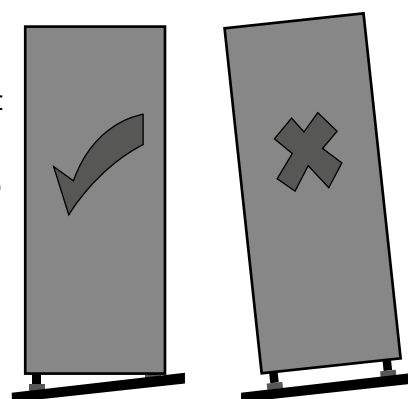

• Installation

Do not cover or block vents.

If you are going to be away from home for a long period of time:

- If the appliance will not be used for several months, turn it off first and then unplug the appliance from the electrical outlet.
- Remove all food.
- Clean and dry the interior thoroughly. To prevent mould and mildew growth and unpleasant odours, leave the door ajar: lock it or remove it if necessary.
- Keep the clean appliance in a dry, ventilated place away from heat sources and do not place heavy objects on top of it.

For your safety and to ensure correct use, before installing and using the device for the first time, please read this user manual carefully, including its tips and warnings. To avoid unnecessary errors and accidents, it is important to ensure that all persons using the device are thoroughly familiar with its operation and safety features. Keep these instructions and ensure that they remain with the device if it is moved or sold, so that all those who use it throughout its lifetime are adequately informed about the use and safety of the device.

For the safety of life and property, observe the precautions in these user instructions, as the manufacturer is not liable for damage caused by omission.

Safety of children and vulnerable people

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children up to 8 years of age can charge and discharge this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are 8 years of age or older and supervised.
- Keep all containers away from children. There is a risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the power cord (as close to the appliance as possible) and remove the door to prevent children from getting an electric shock if it falls or closes.
- If this appliance with magnetic door seals replaces an older appliance that has a spring-loaded latch on the door or lid, make sure that the spring-loaded latch cannot be used before discarding the old appliance. This will prevent it from becoming a death trap for a child.

General safety

-  WARNING!** Keep ventilation openings, in the appliance cabinet or built-in structure, free of obstructions.
-  WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
-  WARNING!** Do not damage the refrigerant circuit.
-  WARNING!** Do not use other electrical appliances (such as ice cream makers) inside refrigeration appliances unless they are approved for this purpose by the manufacturer.
-  WARNING!** Do not touch the bulb if it has been on for a long period of time as it may be very hot.
-  WARNING!** When positioning the appliance, make sure that the power cord is not trapped or damaged.
-  WARNING!** Do not locate multiple portable power outlets or portable power suppliers on the back of the appliance.

Do not store explosive substances such as aerosol cans with a flammable content.

- The refrigerant isobutane (R-600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

- During transport and installation of the unit, ensure that none of the components of the refrigerant circuit are damaged.
- Drain open flames and sources of ignition.
- Ventilate the room in which the appliance is located thoroughly.
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cable may cause a short circuit, fire or electric shock.
- This appliance is intended for use in household and similar applications, such as
 - Staff kitchen areas in shops, offices and other working environments;
 - Hotels, motels and other residential type environments;
 - Non-commercial and similar applications.

 WARNING! Any electrical components (plug, power cord, compressor, etc.) must be replaced by a certified service agent or qualified service personnel.

 WARNING! The bulb supplied with this appliance is a “special purpose lamp bulb” which can only be used with the appliance supplied. This “special purpose lamp” cannot be used for domestic lighting.

The power cord must not be extended. Make sure that the power plug is not crushed or damaged on the back of the appliance. A crushed or damaged power plug may overheat and cause a fire.

Make sure that it can be connected to the power socket of the appliance properly.

Do not pull on the mains cable.

If the power socket is loose, do not push the power plug. There is a risk of electric shock or fire. Do not operate the appliance without the lamp.

This appliance is heavy. Care should be taken when moving it. Do not remove or touch items in the freezer compartment if your hands are wet or damp, as this may cause skin abrasions or freezer burns. Avoid prolonged exposure of the appliance to direct sunlight.

Daily use

- Do not heat the plastic parts of the appliance.
- Do not place food products directly against the rear wall.
- Frozen food must not be refrozen once it has thawed.
- Store prepackaged frozen food in accordance with the frozen food manufacturer's instructions.
- Appliance manufacturers' storage recommendations should be strictly followed. Refer to the relevant instructions.
- Do not place carbonated soft drinks in the freezer compartment as it creates pressure in the container, which may cause it to burst and damage the appliance.
- Ice lollies may cause freezer burn if consumed directly from the appliance.
- To avoid contamination of food, follow the instructions described in this manual.
- Opening the door for prolonged periods may cause a significant temperature rise in the appliance compartments.
- Regularly clean surfaces that may come into contact with food and accessible drainage systems.
- Clean the water tanks if they have not been used for 48 h; Flush the water system connected to a water supply if no water has been drawn for 5 days.

- Guarde la carne y el pescado crudos en recipientes adecuados, de modo que no entren en contacto con otros alimentos ni se derramen sobre ellos.
- Los compartimientos de alimentos congelados de dos estrellas (si se presentan en el aparato) son adecuados para almacenar alimentos pre-congelados, almacenar o hacer helados y hacer cubitos de hielo.
- Los compartimientos de una, dos y tres estrellas (si se presentan en el aparato) no son adecuados para la congelación de alimentos frescos.
- Si se deja el aparato vacío durante largos períodos de tiempo, apague, descongele, limpie, seque y deje la puerta abierta para evitar que hongos y bacterias se desarrollen dentro del aparato.

Care and cleaning

- Before servicing, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal or sharp objects. Do not use sharp objects to remove any ice frost that may appear on the appliance. Use a plastic scraper.
- Regularly check the drain in the refrigerator for defrosted water.
- If necessary, clean the drain. If the drain is blocked, water will accumulate at the bottom of the appliance.

Installation

Important! For electrical connection, carefully follow the instructions given in the following chapters of this manual.

Unpack the appliance and check it for damage.

- Do not connect the appliance if it is damaged. Report any damage immediately to the place of purchase. In this case, keep the packaging carefully.
- It is advisable to wait at least four hours before switching on the unit to allow the oil to return to the compressor.
- There should be adequate air circulation around the appliance, as this prevents the appliance from overheating. To achieve sufficient ventilation, follow the installation instructions.
- Whenever possible, the back of the product should be against a wall to prevent access to hot components (compressor, condenser) and to avoid possible burns.
- The appliance must not be located near radiators or cookers.
- Make sure that the power plug is accessible after installation of the appliance.

Service

- Any electrical work required to service the appliance must be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorised Service Centre, and only original spare parts must be used.

 
Energy Saving

- Do not put hot food in the appliance;
- Do not pack food together as this prevents air circulation;

- Make sure that food does not touch the back of the compartment(s);
- If there is a power failure, do not open the door(s);
- Do not open the door(s) frequently;
- Do not keep the door(s) open for a long time;
- Do not set the thermostat to very high temperatures;
- Some accessories, such as drawers, can be removed for larger storage volume and lower energy consumption; Do not use the thermostat in very high temperatures; Do not place the thermostat in very high temperatures.

Protección ambiental

This appliance does not contain gases that could damage the ozone layer, neither in its refrigerant circuit nor in the insulation materials. The appliance must not be disposed of with municipal waste and rubbish. The insulation foam contains flammable gases. The appliance must be disposed of in accordance with the regulations of the appliance to be obtained from the local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used in this appliance marked with the symbol  are recyclable.

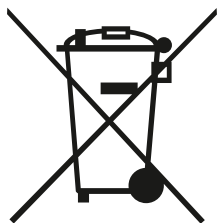

This symbol on the product or on its packaging indicates that this product must not be treated as household waste. Instead, it must be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local authorities, your household waste disposal service or the shop where you purchased the product.

Packing materials

Materials with the symbol  are recyclable. Dispose of the packaging in a suitable collection container for recycling.

Disposal of the appliance

1. Disconnect the plug from the socket.
2. Cut the power cord and discard it.



⚠ Warning! During use, service and disposal of the appliance, pay attention to this symbol, which is located on the back of the appliance (rear panel or compressor). This symbol will be yellow or orange in colour. It is a fire hazard warning sign. There are flammable materials in the refrigerant and compressor piping. Keep away from the source of fire during use, service and disposal..

⚠ WARNING! This appliance must be grounded for safety. The power cord of this appliance is equipped with a three-prong plug which fits into a standard three-prong outlet to minimize the possibility of electric shock. Do not, under any circumstances, cut or remove the third grounding prong from the supplied power cord.

This refrigerator appliance requires a standard 220–240V, 50/60 Hz three-prong grounded outlet.

This appliance is not designed for use with a power inverter.

The cord must be secured behind the appliance and must not be left exposed or dangling, This will prevent accidents and/or injury.

Never unplug the appliance by pulling on the power cord. Always grasp the plug firmly and pull it out.

Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or serviceman install an outlet near the appliance. Use of an extension cord may adversely affect the performance of the unit.

Climate Range

Information about the climate range of the appliance is detailed on the rating plate, which is attached to the inside or outside of the appliance.

It indicates at which ambient temperature the appliance appliance is optimal.

Climate range	Suitable ambient temperature
SN	From +10°C to +32°C
N	From +16°C to +32°C
ST	From +16°C to +38°C
T	From +16°C to +43°C

Note: The limit values of the ambient temperature range for the climatic classes for which the appliance is designed and the internal temperatures of the appliance may be affected by factors such as the location of the appliance, the ambient temperature and the frequency of door opening. When operating in an environment other than the specified climate class (i.e., beyond the rated ambient temperature range), the appliance may not operate properly.

Note: Information on the climate range of the appliance is detailed on the rating plate, which is attached to the inside or outside of the appliance. The information about the climate range of the appliance is detailed on the rating plate, which is attached to the inside or outside of the appliance.

Freon Free

 
The Freon-free refrigerant (R600a) and the foamed insulation material (cyclopentane) used in the appliance are environmentally friendly. R600a is flammable and is sealed in a refrigeration system. In the event of a refrigerant leakage due to a damaged refrigerant circuit, be sure to keep the appliance away from heat sources and open windows to ventilate as quickly as possible.

Locks

If this product is equipped with a padlock, keep the key out of the reach of children. As a safety precaution, break old padlocks or latches when discarding.

Product description

Due to technological innovations, the product description in this manual may not completely match your appliance. More detailed information corresponds to the final product.

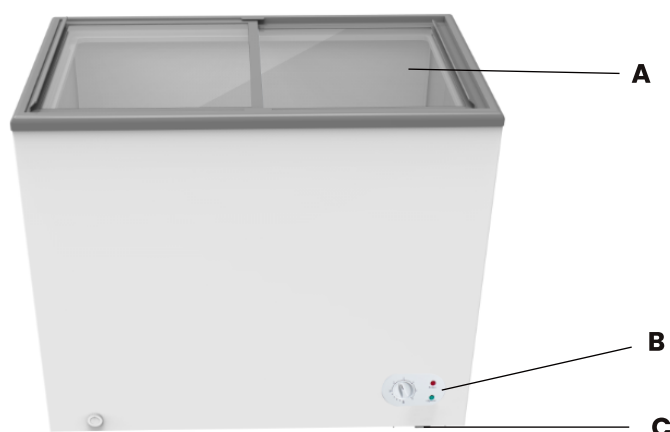

1	Glass doors
2	Control panel
3	Adjustable feet

Due to technological innovations, the product specifications in this manual may not completely match those of your freezer. The details are in accordance with the actual product.

How to use**Before use**

 
Clean the appliance with warm water and detergent and dry it with a cloth.

Note: Electrical components should be wiped with a dry cloth.

Before starting to use the freezer, check that:

1. The interior is dry and air can circulate freely from the rear.
2. Clean the interior as recommended in "CLEANING & CARE".
3. Connect the plug to the power socket and switch on the unit; a red pilot light will then illuminate. Prevent accidental disconnection by securing the switch with adhesive tape. The green light will then illuminate and the compressor will start to operate.
4. When the compressor starts, a noise will be heard. The liquid and gases sealed inside the refrigeration system can also produce noise, whether the compressor is running or not, which is quite normal.
5. If you are going to store already frozen food, open the freezer lid and check that the freezer has reached the correct temperature. You can then insert the already frozen food.
6. Do not load the appliance immediately after switching it on. Wait until the correct storage temperature has been reached. We recommend that you check the temperature with an accurate thermometer.

Freezer operation

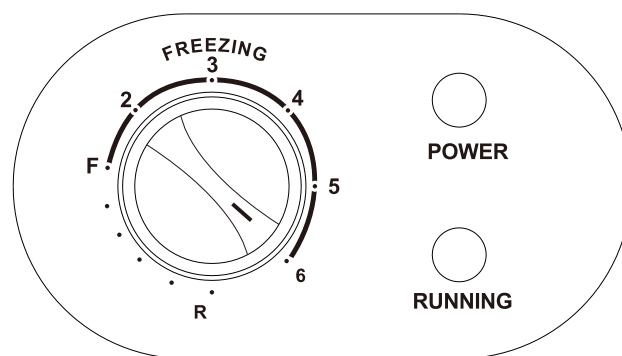

Temperature adjustment:

Switch on the freezer and the POWER indicator light will illuminate, indicating that the freezer is properly connected to the power supply. When the compressor starts running, the OPERATE indicator light will illuminate.

Set the temperature controller to the desired setting, from "F" (cold) to 6 (coldest).

The first time you turn on the freezer, set the temperature regulator to 6 and let it run for at least 2 hours before introducing frozen foods.

"1" is the cold setting and "6" is the coldest setting.

The "4" setting is recommended for normal use.

To interrupt freezer cooling, turn the temperature control knob to the "0" position. The OPERATE indicator light will go out. Turning the temperature control to the "0" setting position stops the cooling cycle but does not cut off the power supply to the freezer.

Temperature range	
R	8~2°
F	-2°C ~ -6°C
2	-4°C ~ -8°C
3	-6°C ~ -10°C
4	-8°C ~ -12°C
5	-10°C ~ -16°C
6	-14°C ~ -18°C

Precautions for use

- The appliance may not operate steadily (there is a possibility that it may defrost or the temperature may rise too high inside) if it is placed for a prolonged period of time below the cold limit of the climatic range for which the appliance is designed.
- Information on the climate range can be found on the rating plate.
- The internal temperature may be affected by factors such as the location of the appliance, ambient temperature, how often the door is opened, etc. The setting of any temperature control device may have to be varied to take these factors into account.
- Effervescent beverages should not be stored in the freezer compartment (if present). Some products such as ice cream should not be consumed too cold, as they may cause burns from direct cold contact.

Defrost and drain

It is recommended to defrost the freezer periodically or when the frost thickness is more than 3 mm.

1. Disconnect the freezer from the power supply.
2. Open the door and remove all frozen foods and wrap them in thick blankets or layers of paper to keep them cold.
3. Remove the drain plug located at the bottom of the freezer interior, then remove the drain cover located on the front of the freezer.
4. Collect all defrost water in a container. Use a scraper to remove the ice. Important! Never use sharp metal tools to scrape off the frost, as this could damage the appliance.
4. After defrosting is complete, clean the inside of the appliance.
5. Put the drain plug and lid back in place and reconnect the appliance to the power supply.
6. Replace the food in the freezer and adjust to the desired temperature.

Use of the FREEZER

The freezer compartment is suitable for storing deep-frozen products, preparing and storing ice cubes and freezing fresh food.

Note: Always make sure that the freezer door is closed and sealed completely. If it is not properly closed, food may thaw. Heavy frost build-up occurs in the freezer compartment.

Maximum freezing capacity

The indications regarding the freezing capacity in 24 hours are given on the rating plate of the appliance. The maximum freezing capacity in 24 hours is given on the rating plate of the appliance.

Pay special attention:

- When shopping, remember that it is best to buy frozen food at the last minute. Try to transport them directly home wrapped in an insulated bag. Once at home, you should immediately place them in the freezer compartment.
- Try to place large quantities of food in the top drawer, as they freeze more quickly.
- Arrange the food with sufficient space between them to ensure proper air circulation.
- Frozen products must not come into contact with fresh food.

Freeze fresh food

If you decide to freeze food yourself, use only fresh food in perfect condition. Rinse vegetables before freezing so that their flavour, aroma and colour do not deteriorate, thus preserving their nutritional value. Aubergines, courgettes and asparagus do not need to be rinsed. More details on this method can be found in any cookery book or manual that deals with aspects of freezing food.

Foods suitable for freezing:

Bread and pastries, fish and seafood, meat, vegetables, fruit, herbs, shelled eggs, dairy products such as cheese, butter and cottage cheese, cooked dishes and leftovers, e.g. soups, stews, soups and gravies. such as soups, stews, cooked meat or fish, potato dishes, gratins and sweet dishes, gratins and sweet dishes.

Foods that should not be frozen:

Vegetables that are normally eaten raw, e.g. lettuce or radishes, eggs in their shells, grapes, whole apples, pears, peaches, hard-boiled eggs, yoghurt, sour milk, fresh sour cream, crème fraîche and mayonnaise.

Food packaging

Pack the food hermetically so that it does not dehydrate or lose its flavour.

1. Place the food in the packaging provided for this purpose.
2. Remove any air that may be present in the packaging.
3. Close it hermetically.
4. Mark containers, indicating contents and date of freezing.

Appropriate materials for the packaging of foodstuffs:

Plastic foil, polystyrene bags and sheets, aluminium foil, boxes and specific packaging for freezing food. These products can be found in specialised shops.

Unsuitable materials for food packaging:

Wrapping paper, parchment paper, cellophane, rubbish bags, used shopping bags.

Materials suitable for closing the packaging:

Rubber bands, plastic clips, twine, special adhesive tape for freezing. Polystyrene plastic bags or sheets can be heat-sealed with a plastic sealer.

Freezing timetable

The shelf life varies depending on the type of food frozen at a standard temperature of -18°C:

- Fish, sausage, cooked dishes, bread and pastries - **up to 6 months**
- Cheese, poultry and meat - **up to 8 months**
- Fruit and vegetables - **up to 12 months**

 **WARNING!** Before cleaning, unplug the power plug first; Do not connect or disconnect the power plug with wet hands, as there is a risk of electric shock and injury. Do not spill water directly on the appliance, thus avoiding rust, electricity leakage and accidents.

Internal and external cleaning

Food residues in the interior can cause a bad smell, so it should be cleaned regularly. Infiniton brand suggests that you clean the interior at least once a month.

Remove all interior elements (shelves, drawers, etc.) and clean with a soft towel or sponge dampened with warm water. Wipe off dust accumulated on the surface of the appliance frequently.

After using detergent, be sure to rinse it with clean water and then wipe it dry with a cloth.

 **WARNING!** Do not use bristle brushes, wire brushes, detergent, soap powder, alkaline detergent, benzene, gasoline, acid, hot water and other corrosive or soluble elements to clean the surface of the appliance, door gasket, plastic decorative parts, etc. to avoid damage. Carefully dry the door seal, clean the groove with a wooden stick wrapped with cotton thread.

¿What to do if there is a failure in the power supply or cooling system?

- Try to open the appliance door as little as possible, so that food can be stored safely and freshly for hours even in summer.
- If you receive the power cut warning in advance:
 1. Set the thermostat to the highest setting one hour in advance, so that the food is completely frozen (Do not store new food during this time!). Restore the temperature to the original setting when the power supply comes back on.
 2. You can also make ice in an airtight container and put it inside the appliance to extend the storage time of fresh food.

Safety checks after maintenance

- Is the power cord broken or damaged?
- Is the plug firmly inserted into the socket?
- Is the socket overheating abnormally?

 **Note:** Electric shock and fire may occur if the power cord and plug are damaged or stained with dust. If there is any abnormality, unplug the power cord and contact the supplier.

Whenever there is a problem with the appliance, check if you can solve it by following the tables below. If the problem persists, contact customer service.

DESCRIPTION	POSSIBLE CAUSE	SOLUTION
No refrigeration at all at all	- Is the plug disconnected? - Are the switches and fuses broken? - Is there no electricity or has the power supply been cut off?"	- Re-plug. - Open the door and check if the light is on.
Abnormal noise.	- Is the appliance stable? - Does the appliance reach up to the wall?	- Adjust the adjustable feet. - Remove it from the wall
Poor cooling efficiency.	- Do you put out hot food or too much food? - Do you open the door frequently? - Do you put the bag of food on the door seal? - Does it get direct sunlight or is it near an oven or cooker? - Is it well ventilated? - Is the temperature too high?	- Put food in the freezer when hot food cools down. - Check and close the door. - Remove the refrigerator from the heat source. - Keep the distance between food to ensure good ventilation. - Set the right temperature.
Bad smells inside.	- Has any food spoiled? - Do you need to clean the fridge? - Do you wrap food with strong smells?	- Throw away spoiled food. - Clean the fridge. - Pack strong-flavoured foods.

Продуктов информационен лист

ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) 2019/2018 НА КОМИСИЯТА по отношение на енергийното етикетиране на хладилни уреди с функция за директна продажба

Име или търговска марка на доставчика: CROWN

Адрес на доставчика: ZORA, 2, Letets Radul Milkov str, 2227, Bozurishte, BULGARIA

Идентификатор на модела: CHF210 ICE

Употреба: Излагане и продажба

Тип на хладилния уред с функция за директна продажба:

шкаф за супермаркети

Код на фамилията на шкафа съгласно хармонизираните стандарти или други надеждни, точни и възпроизводими методи в съответствие с приложение IV.

INF5

Специфични параметри на продукта

4. Интегрален хоризонтален шкаф за супермаркети, подвижен стелаж: Не

Обща площ за излагане (m²)

Температурен клас (в съответствие с таблица 4, буква а))

0,43

freezer: L3

Общи параметри на продукта:

Параметър	Стойност	Параметър	Стойност
Годишна консумация на енергия (kWh/год.)	1 555,00	Препоръчана(и) температура(и) за оптимално съхранение на храни (°C) (тези настройки не трябва да противоречат на температурните условия, определени в приложение IV, таблица 4, 5 или 6, в зависимост от случая)	-12
ИЕЕ	49,9	Клас на енергийна ефективност	D

Параметри на светлинния източник:

Тип на светлинния източник

-

Клас на енергийна ефективност

-

Минимален срок на гаранцията, предложена от доставчика: 24 месеци

Допълнителна информация:

Връзка към уебсайта на доставчика, където се намира информацията по точка 3 от приложение II към Регламент (ЕС) 2019/2024 на Комисията:

Моделът е пуснат на пазара на Съюза от 01/01/2026.



Регистрационен номер в EPREL 2559385

<https://eprel.ec.europa.eu/qr/2559385>

Доставчик: ZORA-M.M.S. (Производител)

Уебсайт: www.zora.bg

Услуги за обслужване на потребителите след продажбата:

Наименование: ZORA

Уебсайт: www.zora.bg

Електронна поща: officezora@zora.bg

Телефон: +35928130340

Адрес:

2, Letets Radul Milkov str, 2227, Bozurishte, BULGARIA

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2018 with regard to energy labelling of refrigerating appliances with a direct sales function

Supplier's name or trade mark: CROWN

Supplier's address: ZORA, 2, Letets Radul Milkov str, 2227, Bozurishte, BULGARIA

Model identifier: CHF210 ICE

Use: Display and sale

Type of refrigerating appliance with a direct sales function:

supermarket cabinet

Cabinet family code, according to the harmonised standards or other reliable, accurate and reproducible methods in accordance with Annex IV.

IHF5

Product specific parameters

4. Integral horizontal supermarket cabinet, roll-in: No

Total display area (m²) Temperature class (according to Table 4(a))

0,43

freezer: L3

General product parameters:

Parameter	Value	Parameter	Value
Annual energy consumption (kWh/a)	1 555,00	Recommended temperature(s) for optimised food storage (°C) (These settings shall not contradict the temperature conditions set out in Annex IV, Table 4, 5 or 6, as applicable)	-12
EEL	49,9	Energy efficiency class	D

Light source parameters:

Type of light source	-
Energy efficiency class	-

Minimum duration of the guarantee offered by the supplier: 24 months

Additional information:

The weblink to the supplier's website, where the information in point 3 of Annex II of Commission Regulation (EU) 2019/2024 is found:

www.zora.bg

Model placed on the Union market from 01/01/2026.



EPREL registration number: 2559385

<https://eprel.ec.europa.eu/qr/2559385>

Supplier: ZORA-M.M.S. (Manufacturer)

Website: www.zora.bg

Customer care service:

Name: ZORA

Website: www.zora.bg

Email: officezora@zora.bg

Phone: +35928130340

Address:

2, Letets Radul Milkov str, 2227, Bozurishte, BULGARIA